



## Warning

1. Align batteries according to the positive and negative poles.
  2. Do not submerge the trash can into water because it is equipped with many electrical components. The trash can may be wiped with a damp cloth.
  3. Do not manually force the lid close; this can cause damage to the internal gears. If the gears are damaged, the automatic lid will not function properly.
  4. Replace used batteries in a timely manner to prevent battery acid leakage. Battery acid may cause damage to the electrical components of the trash can.
  5. Do not mix new and used batteries.
  6. Do not place trash can in direct sunlight or a heavily moisturized environment.
  7. Do not mix alkaline, standard (zinc-carbon), or rechargeable (NiCd, NiMH, etc) batteries.
- Note: This product must be used in-doors. Patented Product.

## Troubleshooting

Errors	Solutions
Lid does not open	- Place the power switch in "I" position Check if batteries are placed in correctly Check if cover of the battery compartment is screwed on tight
	- Wipe the sensor with a dry cloth.
	- Press the "  "button to reset the trash can.
Lid does not close Indicator light is a constant Blue	- Check to see if there are any objects within the sensor area. If there are, remove them.
	- If something is preventing the lid from closing, remove the item and press the "  " button to reset your trash can.
Lid opens slowly and indicator light flashes	- Battery power is low. Replace the batteries.



Imported & distributed by:  
**OCG Consumer Products B.V.**  
 Eemnesserweg 11-10  
 1251 NA Laren  
 the Netherlands  
[klantenservice@omnichannelgroup.com](mailto:klantenservice@omnichannelgroup.com)



[www.blumill.shop](http://www.blumill.shop)